

Affinity Remote Control User Guide

Height-Adjustable Desks



FIG 1.1 (REMOVING THE UPPER AND LOWER LIMITS)


Complete Fig 1.1–Fig 1.4 to reset the Affinity height-adjustable desk.

1. Press then release the "M" button.
2. Press and hold the "M" button again until the display reads "555".
3. The upper and lower limits are now removed.



FIG 1.2 (RESETTING THE BASE)

1. Press and hold the "UP" button until the base reaches its maximum height. Release the "UP" button.
2. Press and hold the "UP" button again until the display reads "ASR" (Reset Mode).
3. Press and hold the "DOWN" button. The table will raise slightly then lower. Continue to hold the "DOWN" button until the handset reads 47.5".

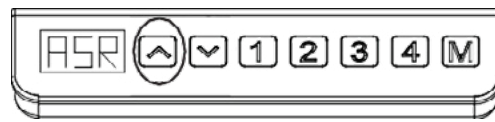

CAUTION

Make sure the laminate upper shroud is aligned correctly with the lower laminate shroud before lowering.

FIG 1.3 (SETTING UPPER LIMIT)

1. Press then release the "M" button. Now, press then release the "UP" button.
2. Press and hold the "UP" button again until the display reads "999".
3. The upper limit is now set.

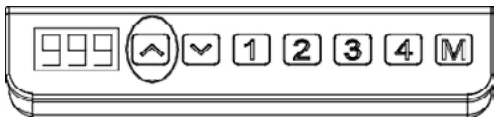


FIG 1.4 (RESET COMPLETE)

1. The desk is now ready for use.

Note: The control box's minimum height is hard-programmed to stop at 27.8".

